


## MA7200 Wiring Diagram for Advanced Pod

Isolate All power to the inverter and ensure the "CHARGE" LED is unlit before undertaking any Wiring, this is usually done by turning power to the inverter OFF and waiting 2 Minutes after the Display is blank.

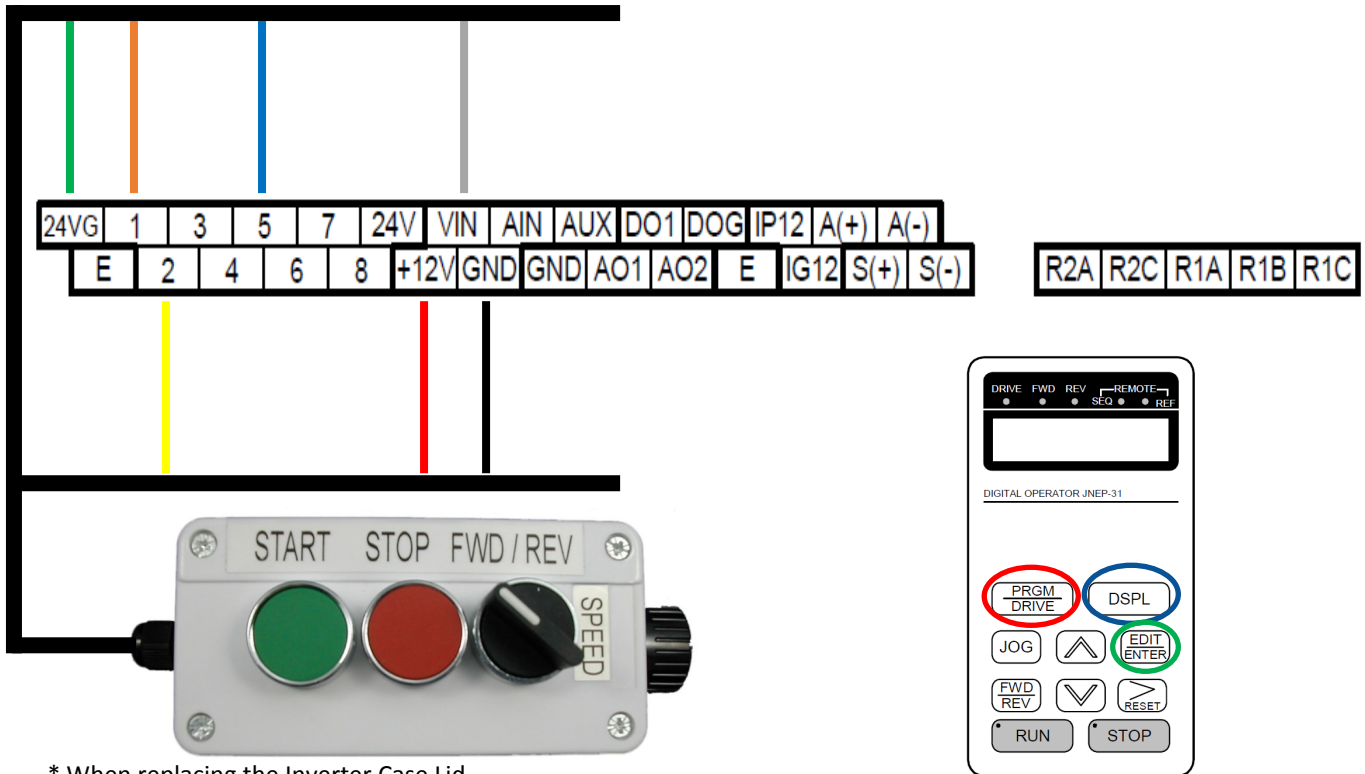

\* When replacing the Inverter Case Lid, Remember to plug the Display Cable into the inverter (Cream Colour Cable).

### Programming:

Once Wired in Please Ring for Programming, Below is just a Reference, as these steps have to be completed in order:

Step 1: Once wired in Ensure the Inverter is Stopped and press the **PRGM/DRIVE** Button, Use the **DSPL** Button and Press this until the SN Parameters Show.

Step 2: Use the Arrow Keys to Get to "SN 03" Press the **EDIT/ENTER** Button, Change this to the SECOND 3 wire initialize (Parameter 10), Press the **EDIT/ENTER** to Save this.

Step 3: Use the Up arrow to get to "SN 04" Press the **EDIT/ENTER** Button, Change this to the Control Terminal (Parameter 1) , Press the **EDIT/ENTER** to Save this.

Step 4: Use the Up arrow to get to "SN 05" Press the **EDIT/ENTER** Button, Change this to the Control Circuit Terminal (Parameter 1) , Press the **EDIT/ENTER** to Save this.

Step 5: Press the **DSPL** Button, then the **PRGM/DRIVE** button to exit Programming, your Pod will now be working.

If you Have any problems or are unsure of any aspect of any of the above please contact us on 01623 720730.