



Drives Direct

Digital Phase Converters

PROGRAMMING


After Wiring your Pendant, Turn the power to the Inverter on, From the factory the display will be showing "05.00". Press the "MODE" button and the Display will show "00.01", this means Parameter Group 0-1, Refer to the user manual on page 16. Press the "<ENT" button, this will shift the cursor onto the far right Digit,

Now use the Up arrow until you get "00.04" Now hold "<ENT" for 1 second to open this parameter, use the Up arrow to change this to "0002", Hold "<ENT" for 1 second to save it.

Now use the Up arrow until you get "00.05" Now hold "<ENT" for 1 second to open this parameter, use the Up arrow to change this to "0002", Hold "<ENT" for 1 second to save it.

Now use the Up arrow until you get "00.02" Now hold "<ENT" for 1 second to open this parameter, use the Up arrow to change this to "0001", Hold "<ENT" for 1 second to save it.

Now press the "MODE" button to exit Programming mode.

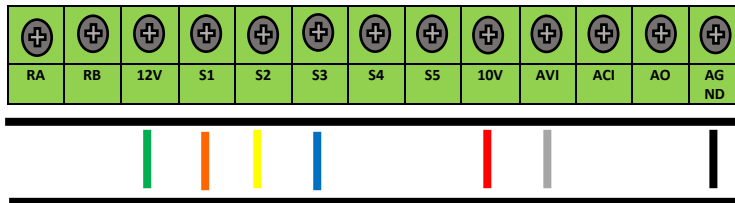

KEY	
GREEN	+12 V
ORANGE	S1
YELLOW	S2
BLUE	S3
RED	10 V
WHITE	AVI
BLACK	AGND

